

CHANNEL	VALUE	FUNCTION
16ch		
1	000-255	PAN 0°→540°
2	000-255	PAN FINE
3	000-255	TILT 0°→260°
4	000-255	TILT FINE
5	000-255	PAN/TILT SPEED Fast to Slow
6		COLOR WHEEL
	000-007	Open
	008-011	Color 1
	012-015	Color 2
	016-019	Color 3
	020-023	Color 4
	024-027	Color 5
	028-031	Color 6
	032-035	Color 7
	036-039	Color 8
	040-043	Color 9
	044-047	Color 10
	048-051	Color 11
	052-055	Color 12
	056-059	Color 13
	060-063	Color 14
	64	Open
	65	Open + Color 1
	66	Color 1
	67	Color 1 + Color 2
	68	Color 2
	69	Color 2 + Color 3
	70	Color 3
	71	Color 3 + Color 4
	72	Color 4
	73	Color 4 + Color 5
	74	Color 5
	75	Color 5 + Color 6

	76	Color 6
	77	Color 6 + Color 7
	78	Color 7
	79	Color 7 + Color 8
	80	Color 8
	81	Color 8 + Color 9
	82	Color 9
	83	Color 9 + Color 10
	84	Color 10
	85	Color 10 + Color 11
	86	Color 11
	87	Color 11 + Color 12
	88	Color 12
	89	Color 12 + Color 13
	90	Color 13
	91	Color 13 + Color 14
	92	Color 14
	93	Color 14 + Open
	94-127	Open
	128-189	Counter-Clockwise Rotation, Fast to Slow
	190-193	Stop
	194-255	Clockwise Rotation, Slow to Fast
7		GOBO WHEEL
	000-007	Open
	008-011	Gobo 1
	012-014	Gobo 2
	015-018	Gobo 3
	019-021	Gobo 4
	022-025	Gobo 5
	026-028	Gobo 6
	029-032	Gobo 7
	033-035	Gobo 8
	036-039	Gobo 9
	040-042	Gobo 10
	043-049	Gobo 11 (effect gobo 1)
	050-056	Gobo 12 (effect gobo 2)
	057-063	Gobo 13 (effect gobo 3)
	064-067	Gobo 1 Shaking, Slow to Fast
	068-071	Gobo 2 Shaking, Slow to Fast
	072-075	Gobo 3 Shaking, Slow to Fast
	076-079	Gobo 4 Shaking, Slow to Fast

	080-083 084-087 088-091 092-095 096-099 100-103 104-111 112-119 120-127 128-189 190-193 194-255	Gobo 5 Shaking, Slow to Fast Gobo 6 Shaking, Slow to Fast Gobo 7 Shaking, Slow to Fast Gobo 8 Shaking, Slow to Fast Gobo 9 Shaking, Slow to Fast Gobo 10 Shaking, Slow to Fast Gobo 11 (effect gobo 1) Shaking, Slow to Fast Gobo 12 (effect gobo 2) Shaking, Slow to Fast Gobo 13 (effect gobo 3) Shaking, Slow to Fast Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
8	000-007 008-255	PRISM (8-facet circular prism) Close Open
9	000-127 128-189 190-193 194-255	PRISM ROTATION Prism Index Counter-Clockwise Rotation, Fast to Slow Stop Clockwise Rotation, Slow to Fast
10	000-007 008-255	FROST Close Open
11	000-255	FOCUS 0%→100%
12	000-255	FOCUS FINE
13	000-007 008-015 016-131 132-139 140-181 182-189 190-231 232-239 240-247 248-255	STROBE Close Open Strobe from Slow to Fast Open Fast Open Slow Close from Slow to Fast Open Slow Open Fast Close from Slow to Fast Open Random Strobe from Slow to Fast Open
14	000-255	DIMMER 0%→100%
15	000-255	DIMMER FINE

		0%→100%
16		SPECIAL FUNCTION (To activate following functions, stop in DMX value for at least 3 seconds.)
	000-129	Null
	130-139	Lamp On
	140-149	Reset Pan/Tilt
	150-159	Reset Effect
	160-199	Null
	200-209	Reset All
	210-211	Gobo Short Cut: Enable
	212-213	Gobo Short Cut: Disable
	214-215	Color Short Cut: Enable
	216-217	Color Short Cut: Disable
	218-229	Null
	230-239	Lamp Off
	240-255	Null